

 
# OPERATION MANUAL

## 3 Hands / Day-Date

### TIME SETTING


#### [ 3 Hands / Day-Date (except for PC23 and PC33) ]

- 1) Pull out the crown to the first click.
- 2) Turn the crown to show the previous day's date.
- 3) Turn the crown in the opposite direction to show the previous day of the week in the desired language
- 4) Pull out the crown to the second click when the second hand is at the 12 o'clock position.
- 5) Turn the crown until the desired date and day (in desired language) appear.
- 6) Turn the crown to set hour and minute hands.  
(Check that AM / PM is set correctly.)
- 7) Push the crown back in to normal position in accordance with the time signal.

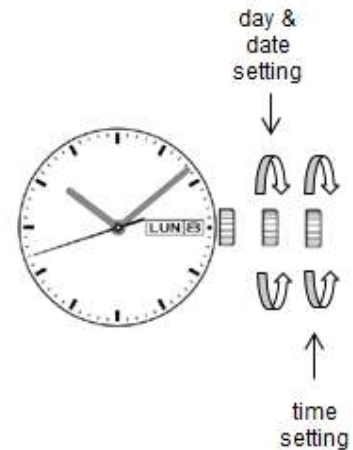

#### [ PC23, PC33 ]

 - 1) Pull out the crown to the first click.
- 2) Turn the crown clockwise until the previous day's date appears.
- 3) Pull out the crown to the second click when the second hand is at the 12 o'clock position.
- 4) Turn the crown clockwise and counter-clockwise repeatedly between 11:15 P.M. and 3:45 A.M. to select the desired day and language.
- 5) Turn the crown to set hour and minute hands.  
(Check that AM / PM is set correctly.)
- 6) Push the crown back in to normal position in accordance with the time signal.

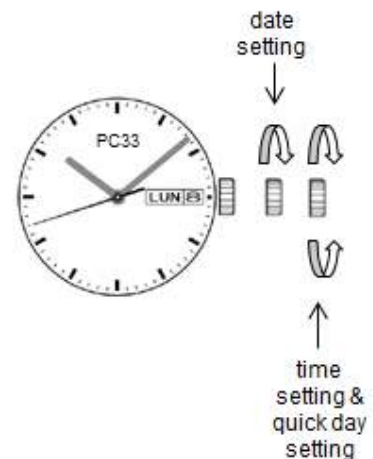

Note :

- \* The date will change gradually between 9:00 P.M. and 4:00 A.M. Therefore, do not set the date during this time period or the date may not change properly. If it is necessary to set the calendar during that time period, first change the time to any time outside it, set the date and then reset the correct time.
- \* In case of bilingual day calendar, choose the desired language. When the day shifts automatically to the next day, the other language will appear temporarily.


# 机芯操作手册
 
## 3针/双历

### 时间设定


#### [ 3针/双历 (PC23 · PC33 除外) ]

- 1) 拔出表冠至位置一。
- 2) 旋转表冠直至日历显示前一天之日期。
- 3) 以反方向旋转表冠直至周历显示前一天的星期和所需语言。
- 4) 秒针于12时位置时拔出表冠至位置二。
- 5) 旋转表冠直至显示目标日期·星期及语言。
- 6) 旋转表冠以调校时针和分针至目标时间。  
(检查是否正确设定上/下午时间)
- 7) 依照报时信号·把表冠推回原位。

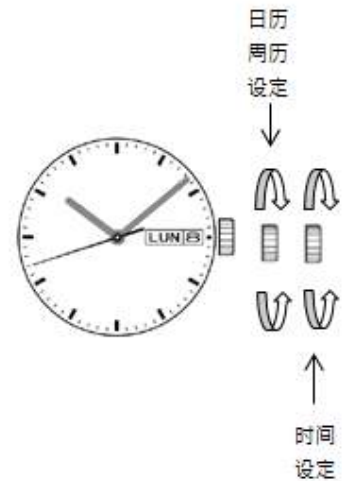

#### [ PC23, PC33 ]

 - 1) 拔出表冠至位置一。
- 2) 顺时针方向旋转表冠直至日历显示前一天之日期。
- 3) 秒针于12时位置时拔出表冠至位置二。
- 4) 反复以顺时针及逆时针方向旋转表冠于11:15P.M.至3:45A.M.时段间·设定星期及语言。
- 5) 旋转表冠以调校时针和分针至目标时间。  
(检查是否正确设定上/下午时间)
- 6) 依照报时信号·把表冠推回原位。

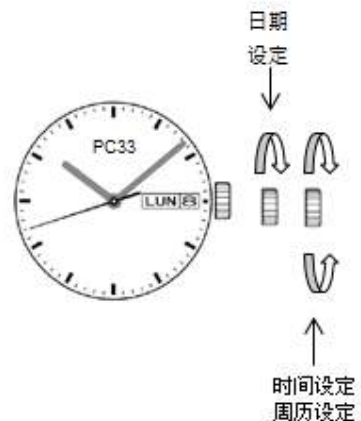

#### 注意:

- \* 日历显示会于晚上九时至早上四时之间慢慢转换。为免日历显示有误·请避免于该时段设定日历。如必须在该时段设定日历·请先把时间设定于时段外·再设定日历·最后重设正确时间。
- \* 若果周历盘是双语周历盘·选择所需语言。当周历显示在迈向下一天自动转换时·另一个语言会短暂出现。